




Installation Instruction Wall Cladding

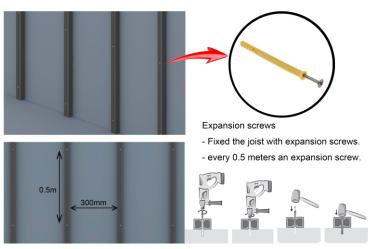


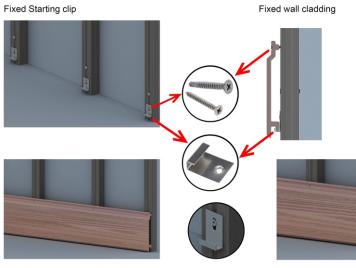




Fixed the frist panel at the bottom

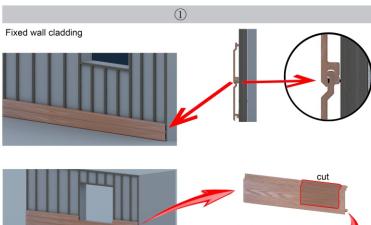


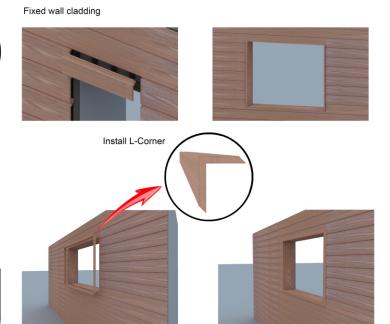

4

2

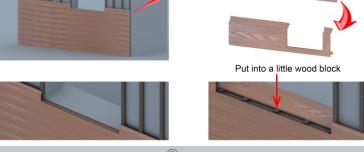

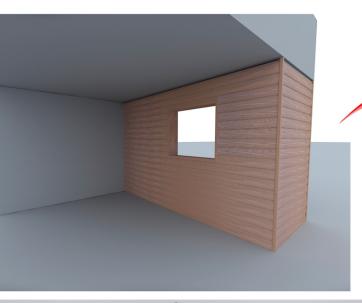

Install L-Corner



This is an example for one side of wall's installation, other walls are same with it.

安徽昕诺新材料有限公司 Anhui Sinon New Materials Co.,Ltd www.sayruowood.com